

JD Air Parts Fuel Drain (Sump) Fairings Installation Information

- Remove existing fuel drain valve and drain remaining fuel into container.
- Place the fuel drain fairing in position on fuel drain flange
- Thread the fuel drain valve back into flange through the fairing (the fairing is held in place by the valve).
- Align the fairing with the aircraft.
- Make certain the drain valve is sealed and is not leaking.

NOTE: The threads on the fuel drain are a pipe taper. If the drain valve has been previously over-tightened the application of thread sealant tape or fuel tank sealant may need to be applied to the threads to seal the valve.

