


JD Air Parts - Fuel Vent installation instructions

- Remove existing Vents.
- Install JD Vents as shown verify screen is in the correct position.
- Hold vent facing forward/parallel to the aircraft and tighten the AN fitting from the inside.

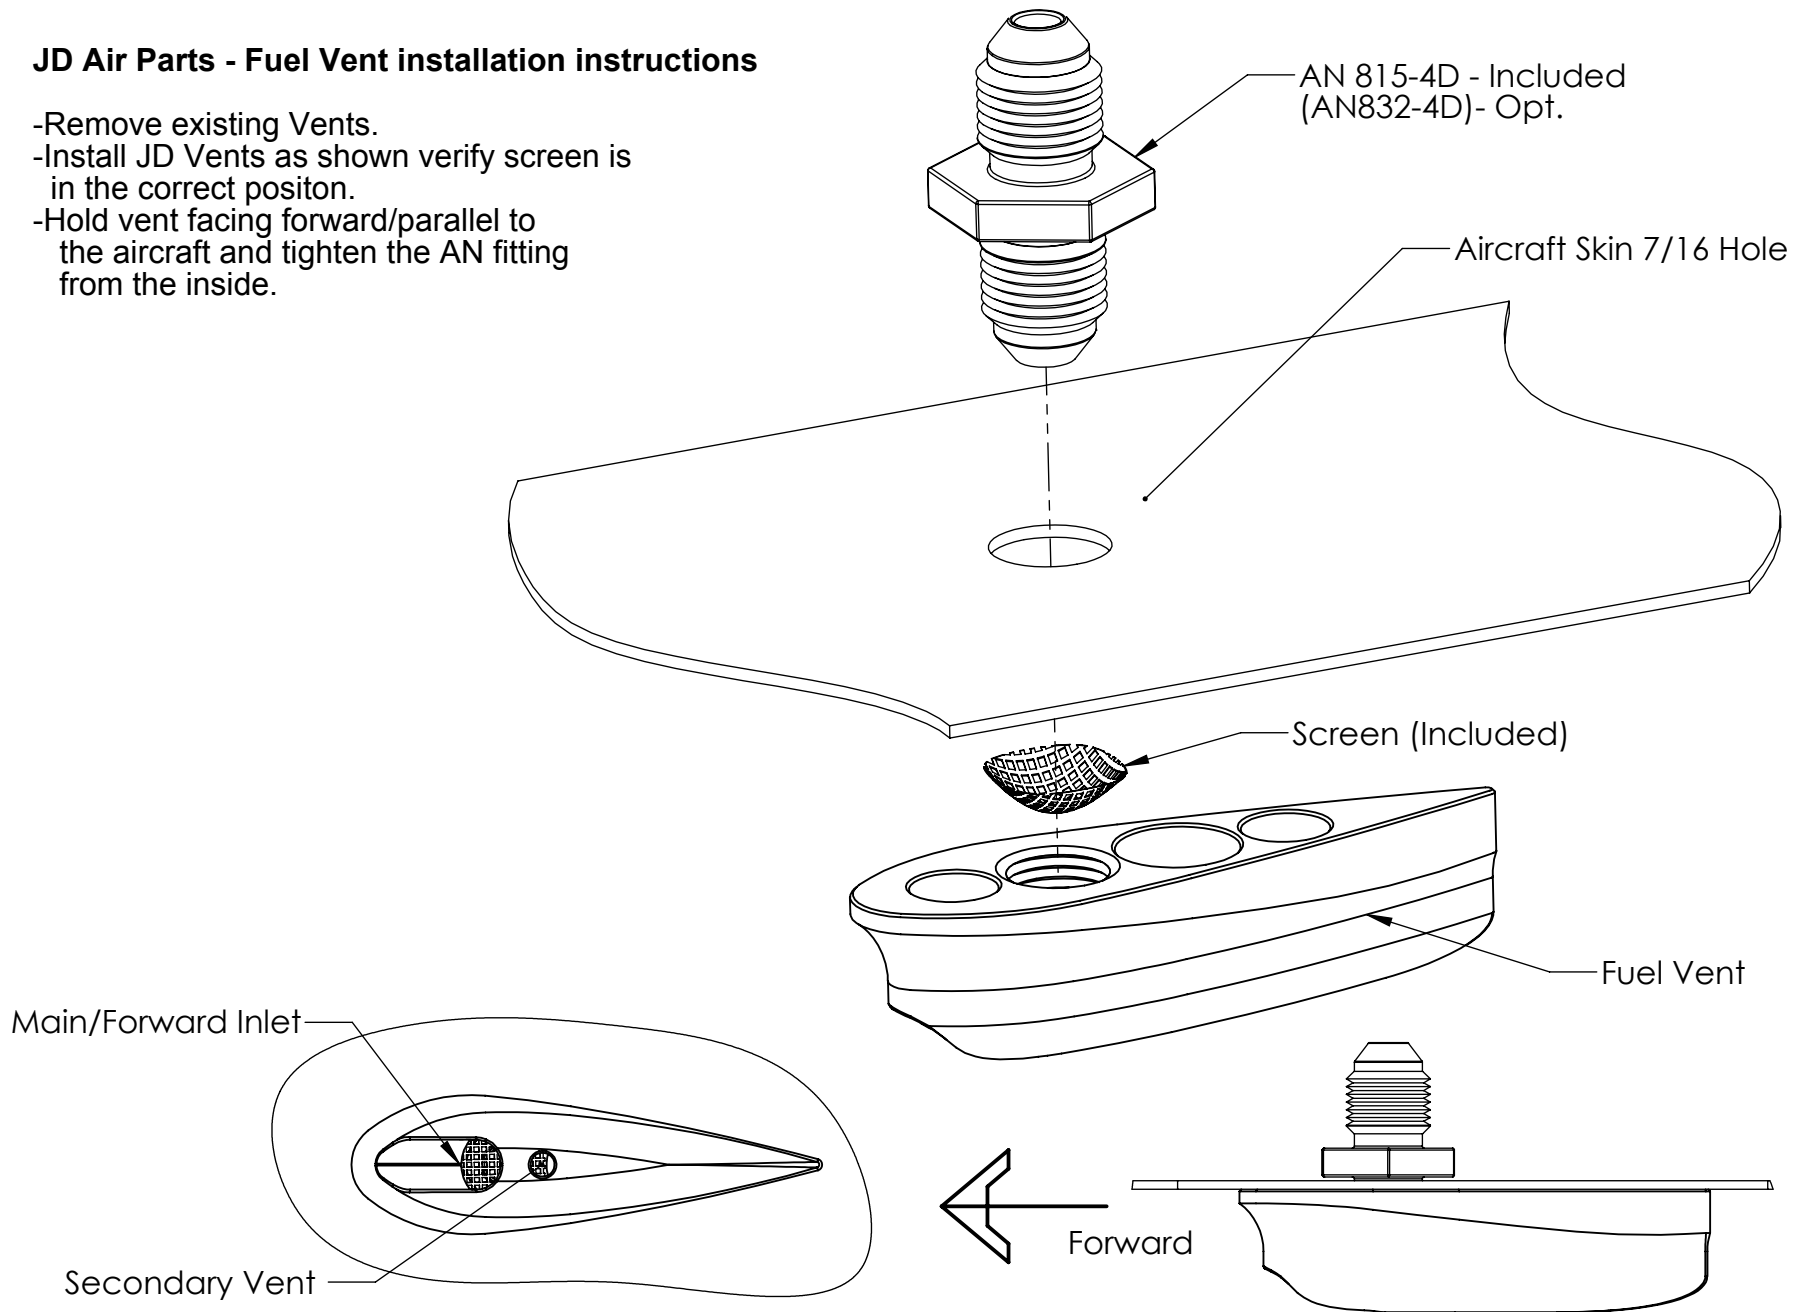

The JD Air Parts Fuel Vents have been tested to provide positive pressure and should NOT be operated in icing conditions. The secondary vent hole is provided to allow air flow to the tank if the forward inlet becomes clogged by debris.